

Tank drain automatically drains liquid from air receiver